

Preparation:

Read the instruction carefully before installation. Ensure that all parts listed in this document are included in the package. Park the vehicle on a level hard surface in a sufficiently lit and ventilated work environment. Use only appropriate tools and equipment. Disconnect the battery whenever working on the electrical system.

Installation:

Reconnect all connectors, clips and parts removed during the installation in accordance with the vehicle manufacturer specification Secure all threads, unless otherwise specified with medium-strong liquid thread locker. Tighten all fasteners in accordance with the vehicle specification and / or according to DIN/ISO specification.

Replace all parts and hardware removed for installation according the vehicle specifications.

Functionality Check:

Once the installation is complete, ensure that no moving parts, wire or fuel hoses are pinched or obstructed in any way. Ensure the normal functionality of the vehicle. Attach and secure all cables and connectors correctly.

General:


If required register installed accessories in the vehicle document with appropriate authorities.

Disclaimer:

Instructions are set out as accurately as possible. There are currently no legal requirements for correctness. Technical issues may vary and are subject to change. Brightwing Technologies or any of its subsidiaries will not be liable for any damages, direct or indirect, that may arise from fitting accessories. For more see www.motorradical.co.za.

TORQUE CHART										
A2 or A4 Stainless Steel	Lubricated (N-m)	0.9	2.3	4.6	7.8	-	19.1	38		
	Dry (N-m)	1	2.6	5.1	8.7	-	21.2	42		
Property Class	Bolt Diameter (mm)	3	4	5	6	7	8	10		

MOUNTING

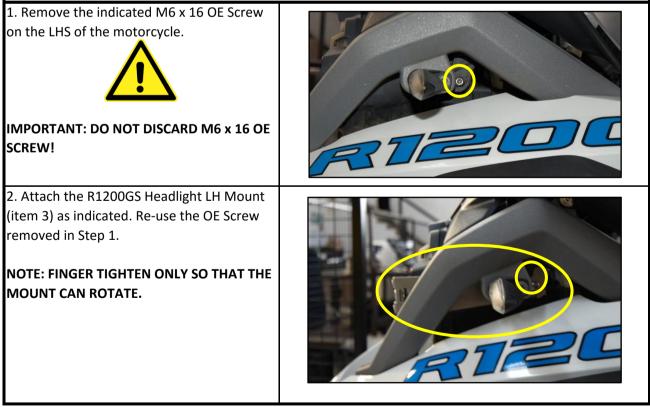

3. Repeat Step 1 on th motorcycle.	e RHS of the	2	
4. Repeat Step 2 using Headlight RH Mount (i		δS	
5. Insert the Dzus 1/4 ⁻ indicated onto the R12			
Guard - Poly Carbonate		9	8
NOTE: ENSURE THAT 1	HE GUARD	IS	
CORRECTLY ORIENTAT			
WASHERS CANNOT BE INSERTED.	REMOVED	ONCE	
Description	Torque	Qty	
Dzus 1/4 Screw	-	2	
Dzus Washer	-	2	
Dzus Lock Washer	-	2	
6. Attach the Headligh	t Guard as ir	ndicated,	
locking the Dzus Screw	rs by turning	g them 1/4	0
turn clockwise.			