

Doc # A09656-D001


Revision: 0

Date: 2016/04/21

FITTING INSTRUCTIONS: BMW R1200GS & Adventure LC K50 K51 Exhaust Header Guards

A qualified, experienced motorcycle technician should install Motorradical 3DX products. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. Motorradical takes no responsibility for damages caused by improper installation. All screws, bolts and nuts, including all replacement hardware provided by Motorradical, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, a Torque Chart is available on our website. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws bolts and nuts.

KIT CONTENTS:

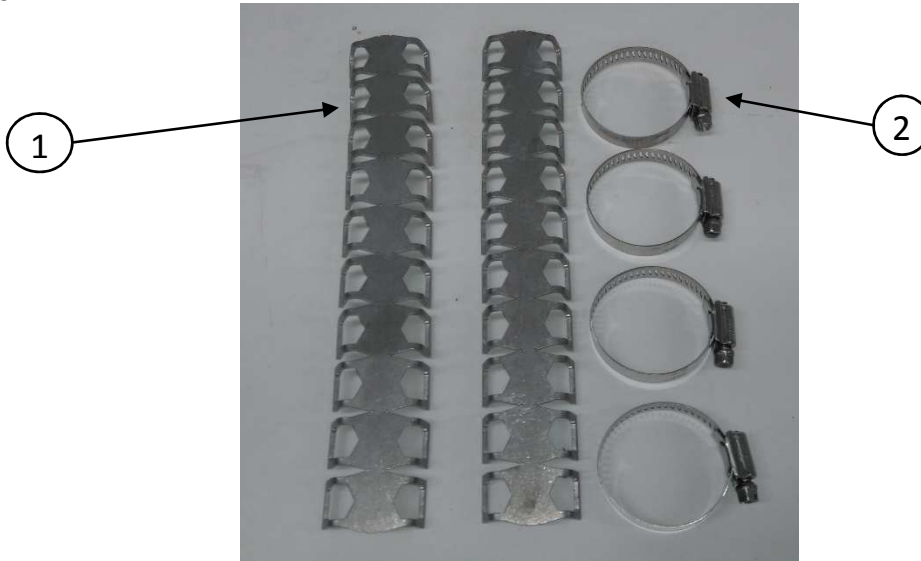






Parts List

No.	Description	Part Number	QTY
1	Exhaust Header Guard	A09656-2125-P001	2
2	Pipe Clamp 80 mm	-	4

TOOLS REQUIRED

- Flat Screwdriver



MOUNTING	
<p>1. Take Note of the mounting location of the Exhaust Header Guard (LHS).</p>	
<p>2. Bend the Exhaust Header Guard into the correct shape by pressing it firmly onto the exhaust as indicated.</p>	
<p>3. Insert the clamps onto the bent Guard as indicated.</p>	
<p>4. Fit the Exhaust Guard to the Exhaust by tightening the clamps.</p>	
<p>NOTE: Ensure that the clamps are orientated in such a way that they can be reached with a screwdriver.</p>	

5. Repeat Steps 1 - 4 for the opposite side to complete Fitment.

