

Accessory installation is the responsibility of the customer.
Motorcycle Adventure Products and Black Dog Cycle Works accept no responsibility for matters arising from the use of these recommendations.




FITTING INSTRUCTIONS

Web Site: www.BlackDogCW.com
Address: Sandpoint, Idaho, USA.

**BDCW001 STONE GUARD
(alloy skid plate)
KTM 950/990 Adventure**

Kit Contents 1 x 5mm Alloy Stone Guard (all OEM fasteners are re-used)

1. Please bike securely on center stand
2. Loosen, but don't remove two rear mounting bolts for the stock skid plate
3. Remove two front mounting bolts for the stock skid plate
4. Remove two rear mounting bolts for the stock skid plate
5. Remove the four rubber bushings from the OEM skid plate and install them onto your new skid plate.
6. Coat four mounting bolts with thread lock compound eg. Lock Tight or similar
7. Loosely install the two rear mounting bolts for the skid plate **FIRST!!!**
(VERY IMPORTANT!)
8. Install and tighten the two front mounting bolts to 25 Nm per manufacture spec. **Be careful not to cross thread front bolts.**
9. Tighten the two rear mounting bolts to 25 Nm per manufacture spec.

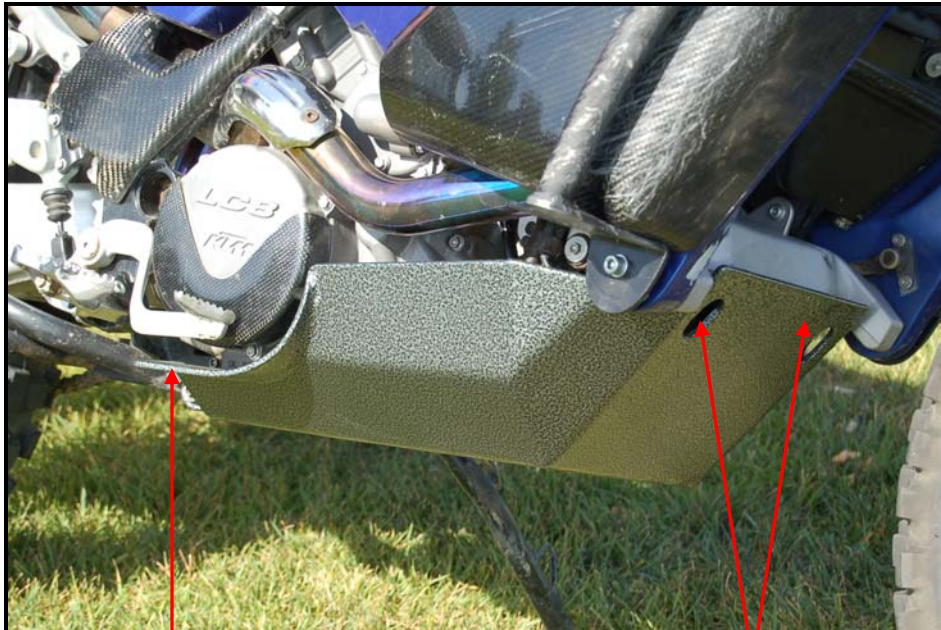

Rear Mounting Bolts

Front Mounting Bolts

Customers who fitted this item also considered:

- HB 502.785 KTM 950-990 3 piece Engine Guard Kit

Black Dog Cycle Works are imported into Australia by
Motorcycle Adventure Products
For more information of this or any other product please contact on:
LANDLINE: +61 7 3139 0387 or
E-MAIL: info@motorcycleadventure.com.au