

## C-Bow

SUZUKI GSF 650 Bandit bis Baujahr 2006

SUZUKI GSF 650 Bandit Baujahr 2007-2008

SUZUKI GSF 1250 Bandit Baujahr 2007-2009  
Art.-Nr.: 630.3513 schwarz

SUZUKI GSX 650 F ab Baujahr 2008  
Art.-Nr.: 630.3517 schwarz

SUZUKI GSF 1200 S Bandit ab Bj 2006  
Art.-Nr.: 630.3509 schwarz

SUZUKI GSX 1250 FA  
Art.-Nr.: 630.3523 schwarz



SUZUKI GSF 650 Bandit Baujahr 2007-2008  
Art.-Nr.: 4003.031.131 schwarz

SUZUKI GSF 1250 Bandit Baujahr 2007-2009  
Art.-Nr.: 4003.032.131 schwarz

SUZUKI GSX 650 F ab Baujahr 2008  
Art.-Nr.: 4003.034.131 schwarz

SUZUKI GSF 1200 S Bandit ab Bj 2006  
Art.-Nr.: 4003.030.131 schwarz

SUZUKI GSX 1250 FA  
Art.-Nr.: 4003.042.131 schwarz

## Montage

Der Bausatz umfaßt die folgenden Teile:

| Stück | Bestellnr. | Bezeichnung                      |
|-------|------------|----------------------------------|
| 2     | 700007063  | C-Bow schwarz                    |
| 1     | 700007184  | C-Bow Halteadapter vorne links   |
| 1     | 700007185  | C-Bow Halteadapter vorne rechts  |
| 1     | 700007186  | C-Bow Halteadapter hinten links  |
| 1     | 700007187  | C-Bow Halteadapter hinten rechts |
| 2     | 150.796    | Inbusschraube M8x90              |
| 4     | 150.784    | Inbusschraube M8x30              |
| 2     | 150.824    | Aludistanz Ø18xØ9x15 mm          |
| 8     | 150.828    | Sechskantschraube M6x16          |
| 8     | 150.809    | U-Scheibe Ø6,4                   |
| 4     | 150.951    | Karosseriescheibe Ø24xØ8,4x2mm   |

Vorbereitende Arbeiten:

Gepäckhaken im Soziusgriff links und rechts entfernen, (hintere Verschraubung) diese entfallen.  
Die hinteren Blinker verbleiben in der Originalposition.

**Tip:**

**Ziehen sie alle zugänglichen Schrauben zuerst nur locker an. Nachdem alles montiert ist, werden die Schrauben dann auf das entsprechende Anzugsmoment festgezogen. Dadurch wird sichergestellt, dass das Produkt spannungsfrei angebaut ist. Schrauben zusätzlich mit Sicherungsmittel sichern. Anzugsmomente des Motorradherstellers beachten!**



**Anzugsmomente des Motorradherstellers beachten!**  
**Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!**  
**Bitte beachten Sie unsere beigefügten Serviceinformationen.**



**Hepco & Becker GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens  
Tel.: 06331 - 1453 - 100  
Fax: 06331 - 1453 - 120  
eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)  
[www.hepco-becker.de](http://www.hepco-becker.de)



**Krauser GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens  
Tel.: 06331 - 1453 - 250  
Fax: 06331 - 1453 - 260  
eMail: [vertrieb@krauser.de](mailto:vertrieb@krauser.de)  
[www.krauser.de](http://www.krauser.de)

## C-Bow

SUZUKI GSF 650 Bandit bis Baujahr 2006

SUZUKI GSF 650 Bandit Baujahr 2007-2008

SUZUKI GSF 1250 Bandit Baujahr 2007-2009  
Art.-Nr.: 630.3513 schwarz

SUZUKI GSX 650 F ab Baujahr 2008  
Art.-Nr.: 630.3517 schwarz

SUZUKI GSF 1200 S Bandit ab Bj 2006  
Art.-Nr.: 630.3509 schwarz

SUZUKI GSX 1250 FA  
Art.-Nr.: 630.3523 schwarz



SUZUKI GSF 650 Bandit Baujahr 2007-2008  
Art.-Nr.: 4003.031.131 schwarz

SUZUKI GSF 1250 Bandit Baujahr 2007-2009  
Art.-Nr.: 4003.032.131 schwarz

SUZUKI GSX 650 F ab Baujahr 2008  
Art.-Nr.: 4003.034.131 schwarz


SUZUKI GSF 1200 S Bandit ab Bj 2006  
Art.-Nr.: 4003.030.131 schwarz

SUZUKI GSX 1250 FA  
Art.-Nr.: 4003.042.131 schwarz


## Montage

### Befestigung der Halteadapter links und rechts hinten:

An der hinteren Verschraubung des Haltebügels. Die gekennzeichneten Halteadapter mit der Inbusschraube M8x90 an der nun freien Bohrung befestigen. Zwischen Adapter und Haltebügel die Aludistanz Ø18xØ9x15mm fügen.



**1**

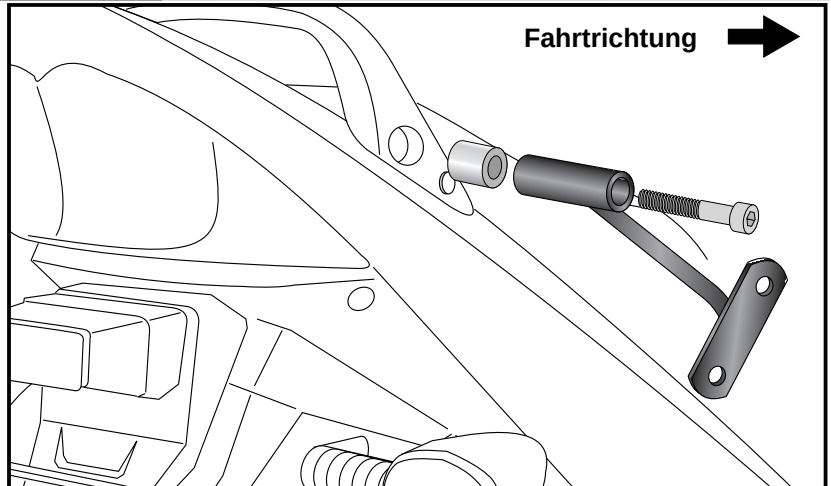


### Befestigung der Halteadapter links und rechts vorne:

An den Soziusfußrastenhaltern, die Originalschrauben entfallen. Bei der hinteren Verschraubung den Halteadapter zwischen Rahmen und Fußrastenhalter positionieren. Vorne zwischen Halter und Rahmen zwei Karosseriescheiben Ø24xØ8,4x2mm zwischenlegen. Verschraubung jeweils mit Inbusschrauben M8x30.



**2**

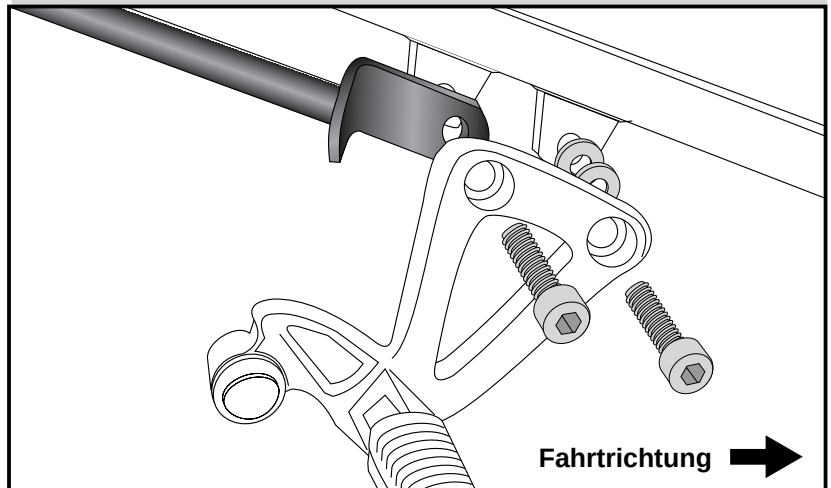


### Montage des C-Bow:

C-Bow Halter mit den Halteadaptern verschrauben.

Zur Befestigung die Sechskantschrauben M6 x 16 mit U-Scheiben Ø6,4 verwenden.



**3**

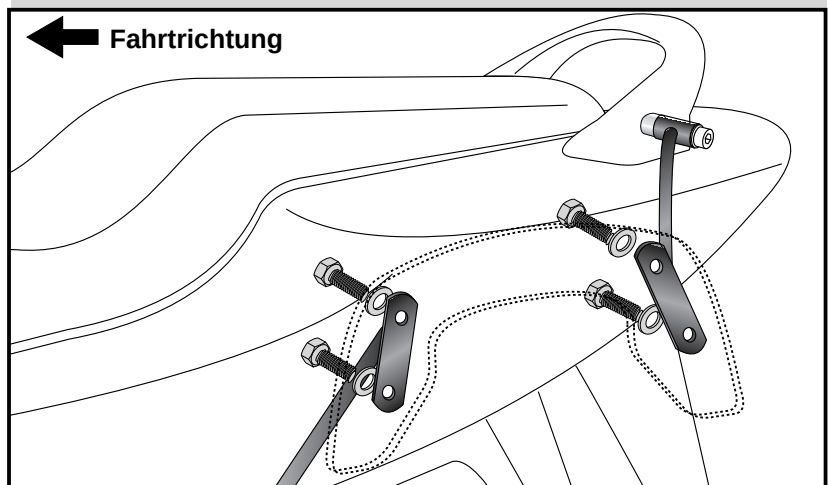

## C-Bow

**SUZUKI GSF 650 Bandit**  
up to date of manufacture 2006

**SUZUKI GSF 650 Bandit**  
date of manufacture 2007-2008

**SUZUKI GSF 1250 Bandit**  
date of manufacture 2007-2009  
item-no.: 630.3513 black

**SUZUKI GSX 650 F**  
from date of manufacture 2008  
item-no.: 630.3517 black

**SUZUKI GSF 1200 S Bandit**  
from date of manufacture 2006  
item-no.: 630.3509 black

**SUZUKI GSX 1250 FA**  
item-no.: 630.3523 black



**KRAUSER**  
MOTORRADGEPÄCKSYSTEME ■ BIKE BAGS

**SUZUKI GSF 650 Bandit**  
date of manufacture 2007-2008  
item-no.: 4003.031.131 black

**SUZUKI GSX 650 F** from date of manufacture 2008  
item-no.: 4003.034.131 black

**SUZUKI GSF 1250** date of manufacture 2007-2009  
item-no.: 4003.032.131 black

**SUZUKI GSF 1200 S** from date of manufacture 2006  
item-no.: 4003.030.131 black

**SUZUKI GSX 1250 FA**  
item-no.: 4003.042.131 black

## Assembling instructions

The kit includes the following parts:

| Quant | item no. | description               |
|-------|----------|---------------------------|
| 2     | 70007063 | C-Bow black               |
| 1     | 70007184 | C-Bow adapter front left  |
| 1     | 70007185 | C-Bow adapter front right |
| 1     | 70007186 | C-Bow adapter rear left   |
| 1     | 70007187 | C-Bow adapter rear right  |
| 2     | 150.796  | allen screw M8x90         |
| 4     | 150.784  | allen screw M8x30         |
| 2     | 150.824  | spacer Ø18xØ9x15 mm       |
| 8     | 150.828  | hexagon bolt M6x16        |
| 8     | 150.809  | washer Ø6,4               |
| 4     | 150.951  | body washer Ø24xØ8,4x2mm  |

### Preparing:

Unmount the rear screws of the handle bar,  
they are obsolete.  
The rear blinker remain in their original position.

### Tip:

Fit all parts and screw on not too strong.  
After mounting all parts, the screws should be tightened  
to the torque specified.  
This guarantees, that the kit is mounted without tension.



Control all screw connections after the assembling for tightness!  
Please notice our enclosed service information.



**Hepco & Becker GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens  
Tel.: +49 6331 - 1453 - 100  
Fax: +49 6331 - 1453 - 120  
eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)  
[www.hepco-becker.de](http://www.hepco-becker.de)



**Krauser GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens  
Tel.: +49 6331 - 1453 - 250  
Fax: +49 6331 - 1453 - 260  
eMail: [vertrieb@krauser.de](mailto:vertrieb@krauser.de)  
[www.krauser.de](http://www.krauser.de)

## C-Bow

**SUZUKI GSF 650 Bandit**  
up to date of manufacture 2006

**SUZUKI GSF 650 Bandit**  
date of manufacture 2007-2008

**SUZUKI GSF 1250 Bandit**  
date of manufacture 2007-2009  
item.-no.: 630.3513 black

**SUZUKI GSX 650 F**  
from date of manufacture 2008  
item.-no.: 630.3517 black

**SUZUKI GSF 1200 S Bandit**  
from date of manufacture 2006  
item.-no.: 630.3509 black

**SUZUKI GSX 1250 FA**  
item.-no.: 630.3523 black



**SUZUKI GSF 650 Bandit**  
date of manufacture 2007-2008  
item-no.: 4003.031.131 black

**SUZUKI GSX 650 F** from date of manufacture 2008  
item-no.: 4003.034.131 black

**SUZUKI GSF 1250** date of manufacture 2007-2009  
item-no.: 4003.032.131 black

**SUZUKI GSF 1200 S** from date of manufacture 2006  
item-no.: 4003.030.131 black

**SUZUKI GSX 1250 FA**  
item-no.: 4003.042.131 black


### Assembling instructions

**Fastening of the C-Bow adapters left + right rear:**

with allen screw M8x90.  
Sandwich spacer Ø18xØ9x15mm  
between adapter and handle bar.



**1**

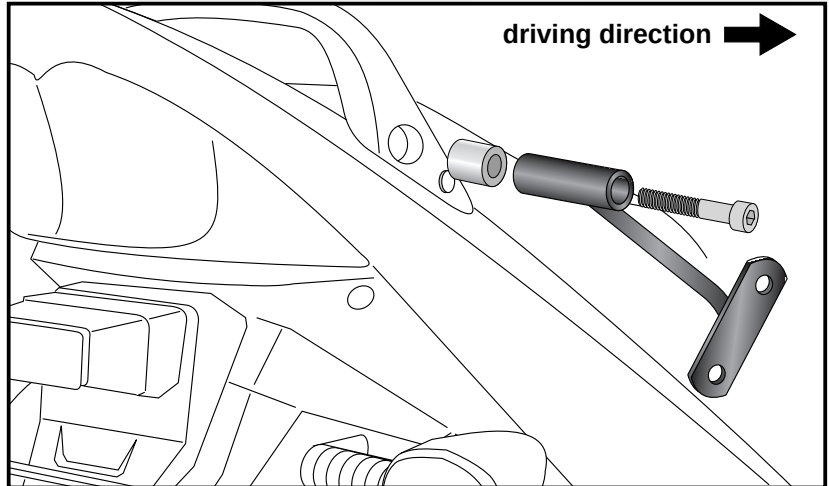


**Fastening of the C-Bow adapters left + right front:**

at the rear fixing point of the footrest bracket with allen screw M8x30.  
At the front fixing point sandwich two body washers Ø24xØ8,4x2mm between adapter and frame.



**2**

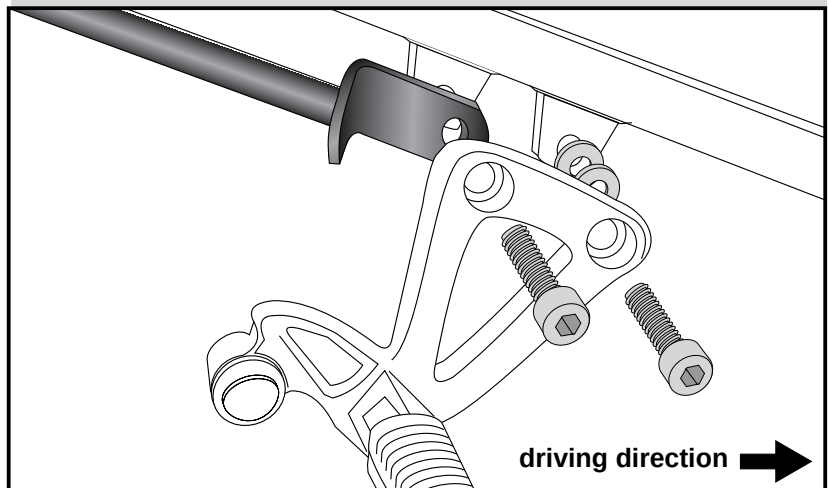

**Fastening of the C-Bow:**  
with hexagon bolts M6 x 16 and washers Ø6,4.



**3**

