

Minirack

DUCATI Monster 1200/S

Artikel-Nr.: 660.7525 01 01 schwarz

Seitenkoffer

Topcases

Gepäckträger

Lock it System

Softbags

Aluminiumkoffer

Lederkoffer

Schutzbügel

Hauptständer

Chopper-Parts

Accessoires



Montage

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700007548	Alubrücke
1	700008432	Rohradapter links
1	700008433	Rohradapter rechts
2	150.969	Linsenkopfschrauben M8x60
2	151.341	Linsenkopfschrauben M8x75
4	151.024	Senkinbusschrauben M6 x 20
4	150.809	U-Scheiben Ø6,4
4	150.810	U-Scheiben Ø8,4
4	151.309	Senkscheiben Ø6,4
4	150.799	selbstsichernde Muttern M6
4	151.441	Stahldistanzen Ø18xØ9x20mm schwarz
2	151.443	Aludistanz abgesetzt Ø20xØ9x9,5/3 mm
2	151.444	Aludistanz abgesetzt Ø20xØ9x18,5/12 mm
4	151.442	Stahldistanzen Ø12xØ9x12mm
1	330.302	Logo Hepco & Becker ø30mm

Die Alubrücke ist nicht Topcase-tauglich.

Tip:

Am besten zu zweit arbeiten.

Ziehen sie alle zugänglichen Schrauben zuerst nur locker an. Nachdem alles montiert ist, werden die Schrauben dann auf das entsprechende Anzugsmoment festgezogen. Dadurch wird sichergestellt, dass das Produkt spannungsfrei angebaut ist.





Montage


Vorbereitung:

Beide Blinker demontieren.
Beide Handgriffe am Heck demontieren.
In die Gummitüllen der Blinker die
Stahldistanzen Ø12xØ9x12mm
eindrücken. Die Original-Befestigungs-
schrauben entfallen.

4x



1

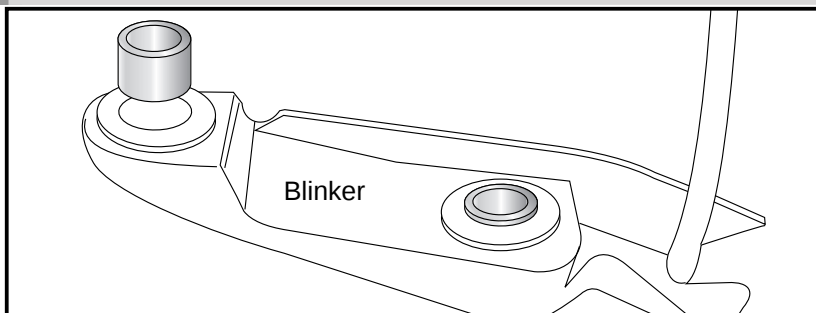


Die kleine abgesetzte Aludistanz ①
Ø20xØ9x9,5/3 mm auf die vordere Bohrung
auflegen.

Die große abgesetzte Aludistanz ②
Ø20xØ9x18,5/12 mm auf die hintere
Bohrung auflegen.


2x



2x



2

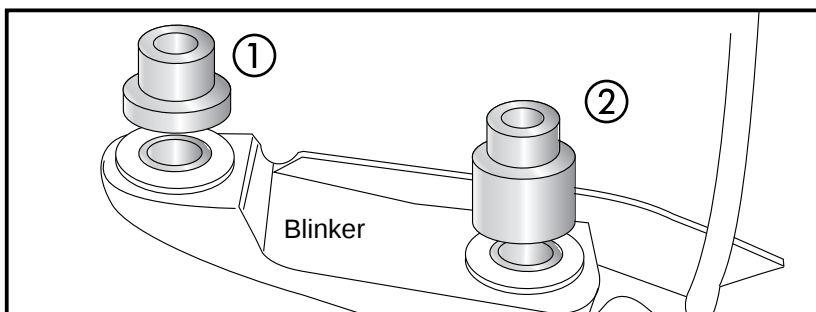

Montage der Rohradapter links und rechts:

Zusammen mit den Handgriffen und den
Blinkern.

VORNE ①

mit den Linsenkopfschrauben M8x60
sowie U-Scheiben Ø8,4.



HINTEN ②

mit den Linsenkopfschrauben M8x75
sowie U-Scheiben Ø8,4.


Zwischen Rohradapter und Haltegriffen
die Stahldistanzen Ø18xØ9x20mm fügen.
(Bei zusätzlichem Anbau des C-Bow-
halters entfallen die Distanzen).

Rohradapter noch nicht festziehen.

3

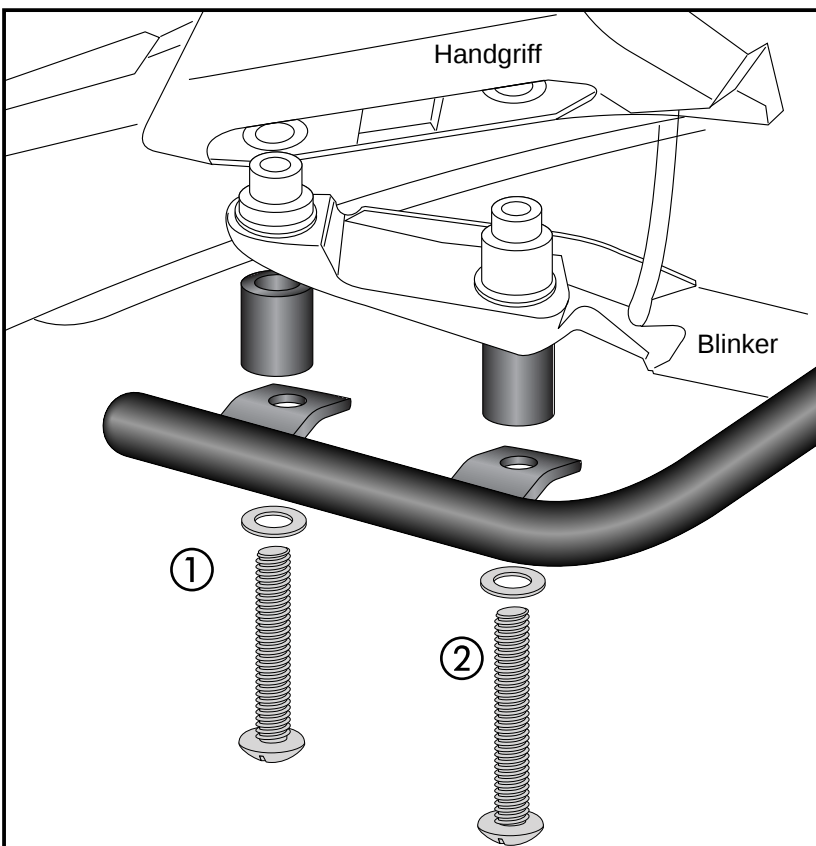

2x




2x



4x

4x



Minirack

DUCATI Monster 1200/S

Artikel-Nr.: 660.7525 01 01 schwarz

Seitenkoffer

Topcases

Gepäckträger

Lock it System

Softbags

Aluminiumkoffer

Lederkoffer

Schutzbügel

Hauptständer

Chopper-Parts

Accessoires



Montage


Montage der Alubrücke:

Die Alubrücke wird mit den Senkbusschrauben M6 x 20mm, Senkscheiben Ø 6,4, U – Scheiben Ø 6,4 und selbstsichernden Muttern M6 an den Rohradaptern montiert.


Die Alubrücke auf den Rohradaptern so positionieren, dass sich die Sitzbank noch abnehmen lässt.

Abschließend das Minirack ausrichten und alle Verschraubungen festziehen.

4

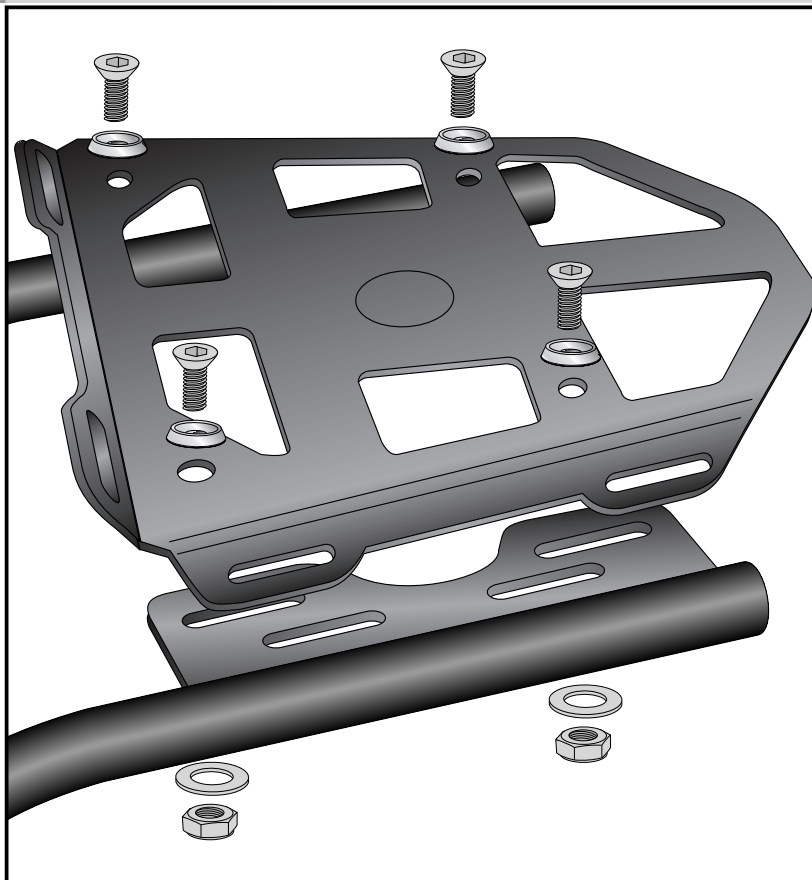

4x



4x



4x



4x



Anzugsmomente des Motorradherstellers beachten!

Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!

Bitte beachten Sie unsere beigefügten Serviceinformationen.

Als weiteres Zubehör lieferbar:

C-Bow Halter für Softtaschen (kombinierbar)

Art.-Nr.: 630.7525



Hepco & Becker GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: +49 (0)6331 - 1453 - 100
Fax: +49 (0)6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Minirack

DUCATI Monster 1200/S

Item - No.: 660.7525 01 01 black

Side cases

Top cases

luggage frames

Lock it system

Softbags

Aluminium luggage

Leather luggage

Protection bars

Center stands

Chopper parts

Accessories



Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700007548	alu palette
1	700008432	tube adapter left
1	700008433	tube adapter right
2	150.969	filister head screw M8x60
2	151.341	filister head screw M8x75
4	151.024	countersunk screw M6 x 20
4	150.809	washer Ø6,4
4	150.810	washer Ø8,4
4	151.309	countersunk washer Ø6,4
4	150.799	self lock nuts M6
4	151.441	steel spacer Ø18xØ9x20mm black
2	151.443	alu spacer,partially reduced Ø20xØ9x9,5/3 mm
2	151.444	alu spacer,partially reduced Ø20xØ9x18,5/12 mm
4	151.442	steel spacer Ø12xØ9x12mm
1	330.302	emblem Hepco & Becker ø30mm

The alu palette is not compatible with a topcase.

Tip:

A second person is useful for the assembly.

Fit all parts and screw on not too strong. After mounting all parts, the screws should be tightened to the torque specified. This guarantees, that the kit is mounted without tension.



Minirack

DUCATI Monster 1200/S

Item - No.: 660.7525 01 01 black

Side cases

Top cases

luggage frames

Lock it system

Softbags

Aluminium luggage

Leather luggage

Protection bars

Center stands

Chopper parts

Accessories



Assembling instructions

Preparing:

Dismantle both indicators.

Dismantle handle bars.


Stick steel spacers $\varnothing 12 \times \varnothing 9 \times 12 \text{ mm}$ into the borings in the rubber grommets.

Original screws are obsolete.

4x



1

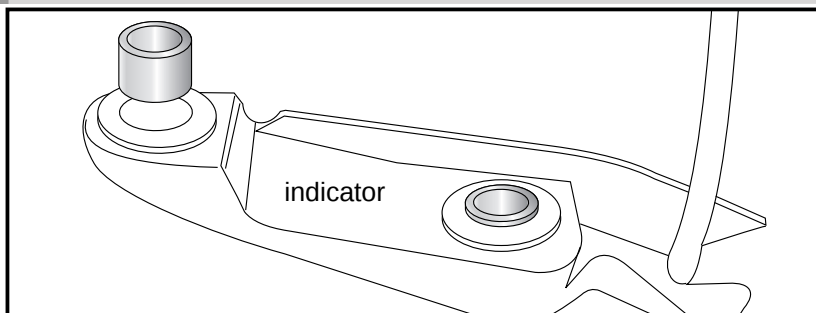


Place the partially reduced small alu ^① spacer $\varnothing 20 \times \varnothing 9 \times 9,5/3 \text{ mm}$ to the front hole.

Place the partially reduced big alu ^② spacer $\varnothing 20 \times \varnothing 9 \times 18,5/12 \text{ mm}$ to the rear hole.


2x



2x



2

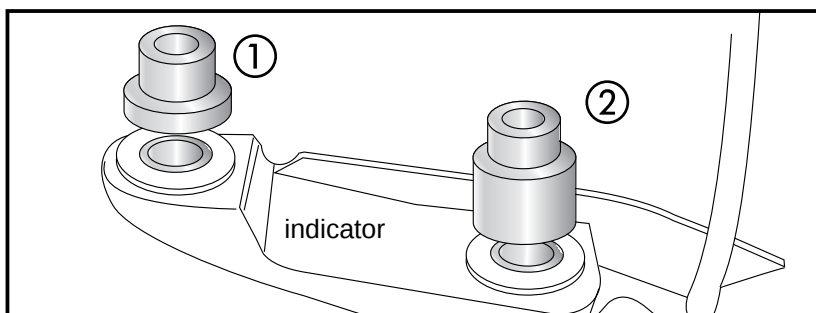

Fastening of the tube adapters left+right: together with the handle bars and the indicators.

FRONT ^①

with filister head screws M8x60
with washers $\varnothing 8,4$.



REAR ^②

with filister head screws M8x75
with washers $\varnothing 8,4$.


Add steel spacer $\varnothing 18 \times \varnothing 9 \times 20 \text{ mm}$ between tube adapters and handle bars.

(the additional attachment of the C-Bowholder eliminates the distances).

3

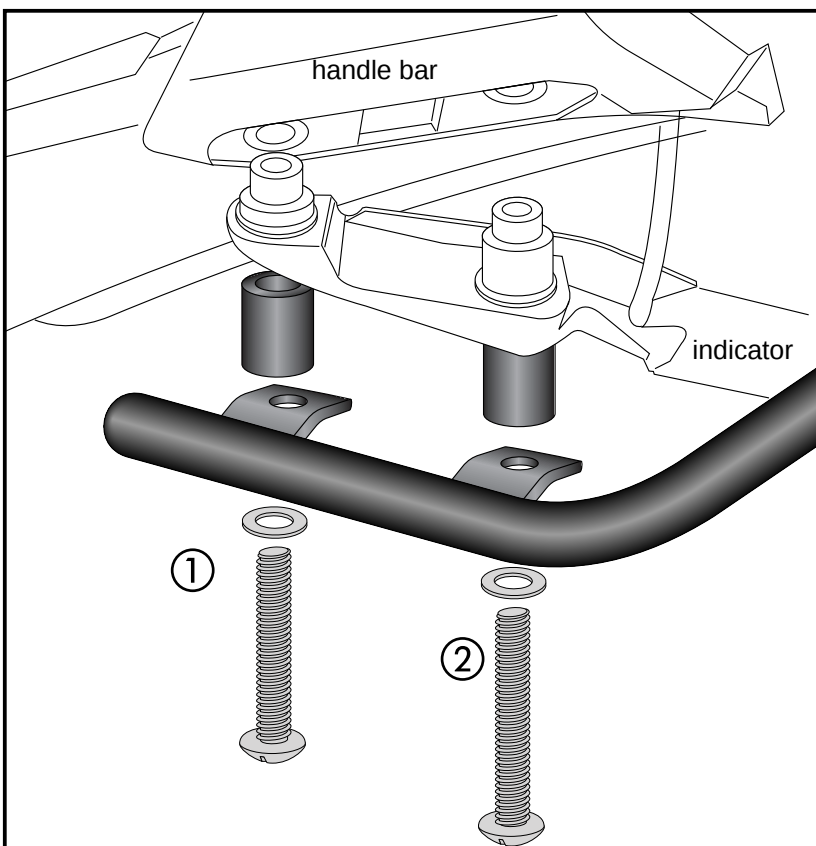

2x




2x



4x

4x



Minirack

DUCATI Monster 1200/S

Item - No.: 660.7525 01 01 black

Side cases

Top cases

luggage frames

Lock it system

Softbags

Aluminium luggage

Leather luggage

Protection bars

Center stands

Chopper parts

Accessories




Assembling instructions


Fastening of the alu palette:
use countersunk head screws M6x20 and
countersunk washers Ø6,4.
Secure it with self lock nuts M6 and
washers Ø6,4.

Finally align the Minirack so that the seat
can still be opened.
Now tighten all screws and nuts.

4

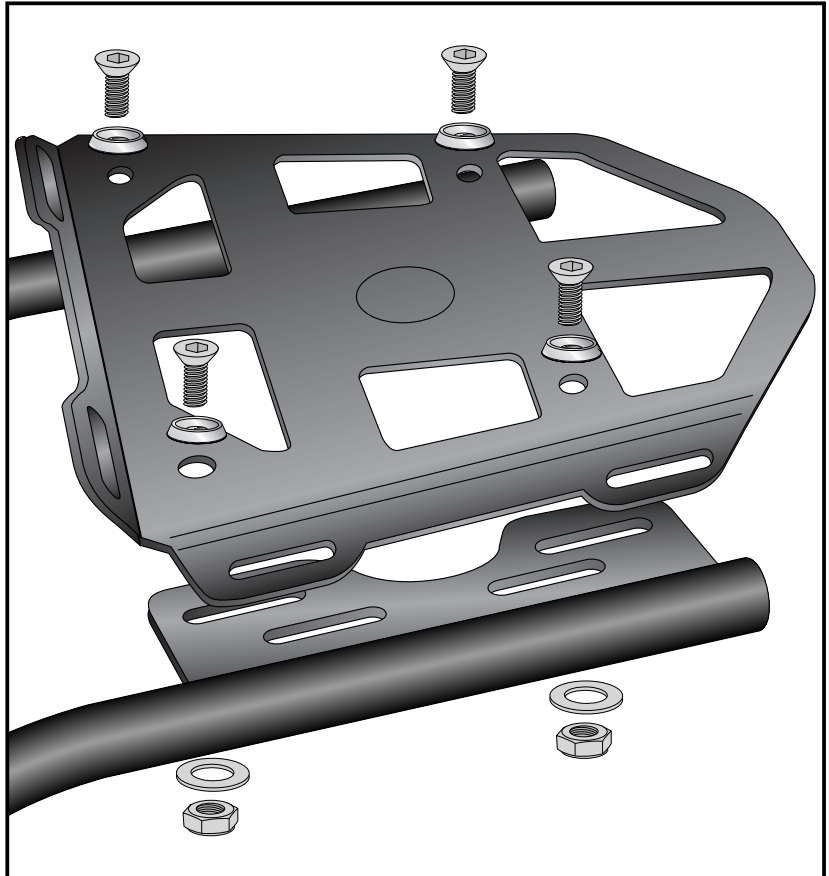

4x



4x



4x



4x



Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

Also available:

C-Bow Holder for softbags (can be combined) Item-No. 630.7525



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens

Tel.: +49 (0)6331 - 1453 - 100
Fax: +49 (0)6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de