

YAMAHA MT - 125 / ABS

Art.-Nr.: 670.4543 schwarz

## Montage

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700008830	Gepäckplatte
1	700008831	Gepäckplattenunterbau

**Bitte vor jeder Fahrt den festen Sitz des SPORTRACKS im Schloss kontrollieren.**

1	700008832	Schraubensatz
4		Senkkopfschrauben M6 x 18
4		selbtsichernde Muttern M6
4		Verschußstopfen Ø8 mm
1		Verschußstopfen Ø25 mm
1		Logo Hepco & Becker ø30mm
1		Dichtband 20x40 100 cm
4		Gummipuffer
4		U-Scheiben Ø6,4



**Hepco & Becker GmbH**  
 An der Steinmauer 6  
 D-66955 Pirmasens  
 Tel.: 06331 - 1453 - 100  
 Fax: 06331 - 1453 - 120  
 eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)  
[www.hepco-becker.de](http://www.hepco-becker.de)

**Anzugsmomente des Motorradherstellers beachten!**  
 Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!  
 Bitte beachten Sie unsere beigefügten Serviceinformationen.

YAMAHA MT - 125 / ABS

Art.-Nr.: 670.4543 schwarz

## Montage

### Vorbereitende Maßnahmen:

Die Soziussitzbank abnehmen.


### Montage des Sportracks:

Die Senkkopfschrauben M6x18 durch das Sportrack stecken. Den Gepäckplattenunterbau mit den U-Scheiben  $\varnothing 6,4$  und den selbstsichernden Muttern M6 aufschrauben.

Die Gummistopfen in die Bolzen einstecken.

Durch das Aufschieben des Sportracks können sich die Gummistopfen herausdrücken.

Für einen besseren Halt, die Gummistopfen einkleben!

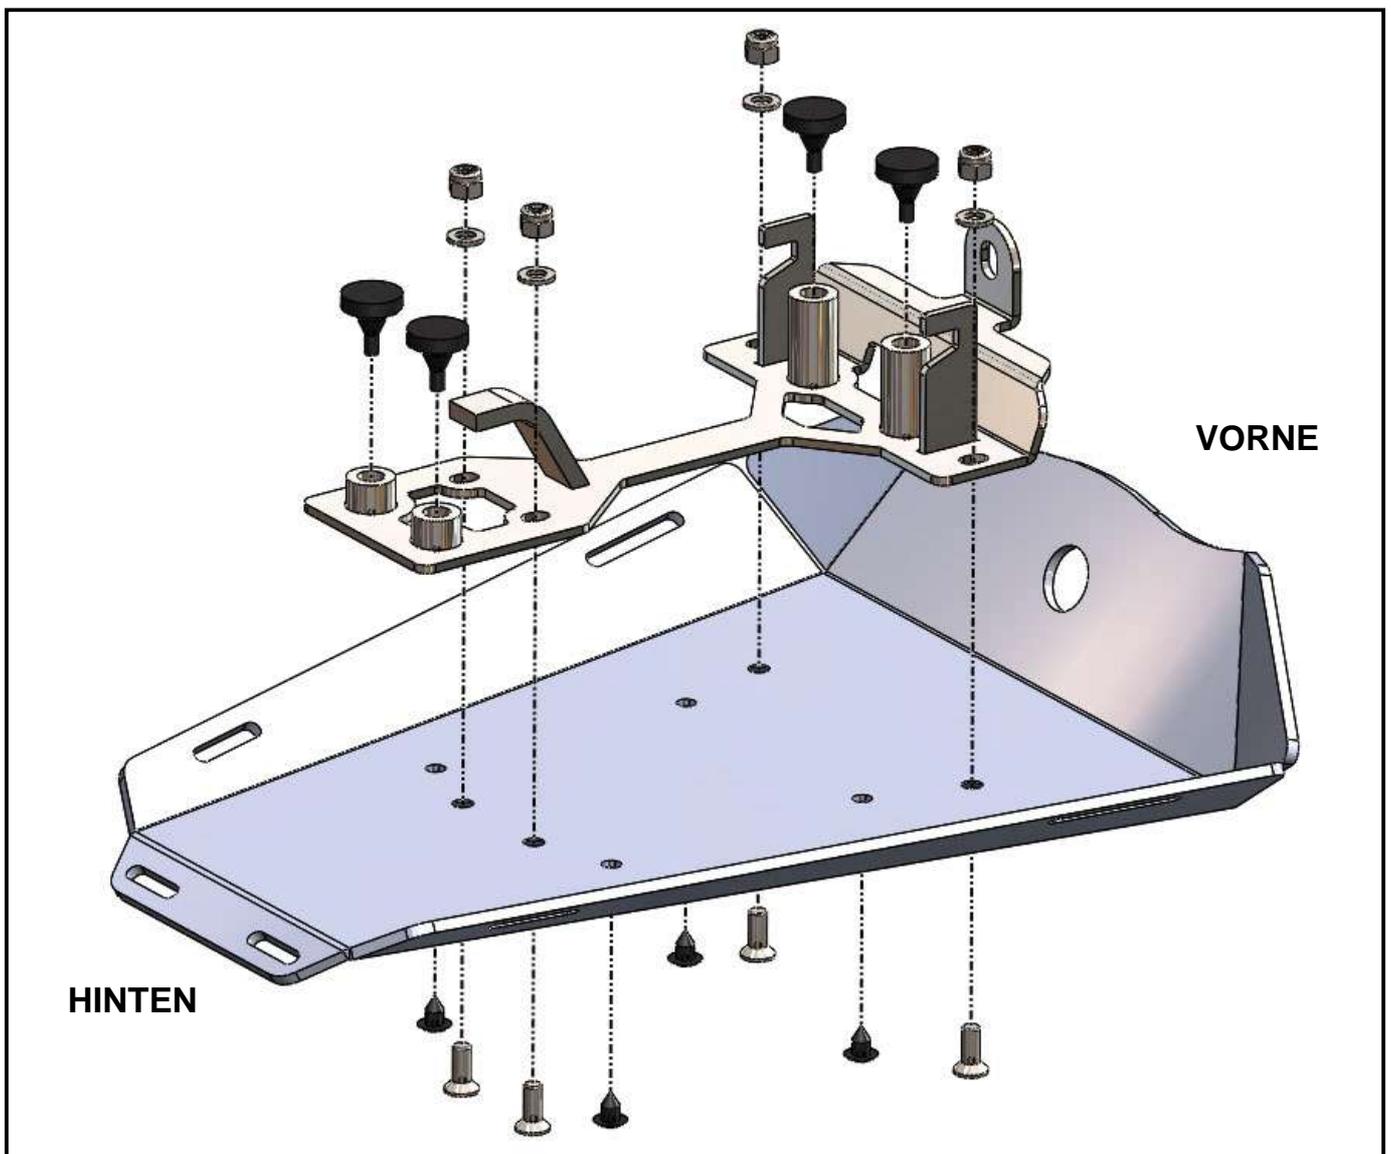

YAMAHA MT - 125 / ABS


Art.-Nr.: 670.4543 schwarz

## Montage



### Anbringung des Dichtbandes:

Dieses wird, wie gezeigt, auf der Rückseite der Sportrackplatte aufgeklebt.

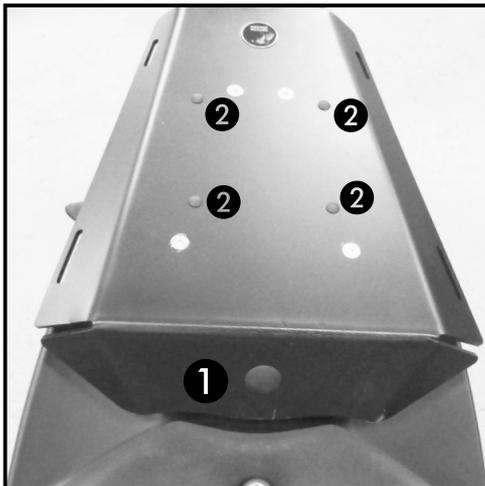

### Montage auf dem Fahrzeug:

Das Sportrack wird auf die gleiche Weise wie das Soziuskissen befestigt.

Sportrack von vorne in die Halterungen am Heckrahmen einschieben und mit der originalen Mutter anschrauben.

Anschließend die Bohrung im Sportrack mit dem Kunststoffstopfen  $\varnothing 25\text{mm}$  verschließen. ❶

In die freien Bohrungen die Verschlussstopfen  $\varnothing 8\text{mm}$  einsetzen. ❷  
Hinweis: Die 4 Löcher sind zur Montage der Hecktaschenhalterung!



### Gepäckempfehlung:

Die Sportrack Hecktasche, speziell für das SPORTRACK entwickelt. Der dazugehörige Lock it Halter wird am Sportrack verschraubt. Das Auf- und Absetzen der Tasche ist kinderleicht dank des Magnet-Systems des Lock it Hecktaschenhalters.

Artikel-Nummer: 640806 00 01



## Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700008830	sportrack plate
1	700008831	holding plate

1	700008832	Screw kit
4		countersunk head screw M6 x 18
4		self lock nuts M6
4		plastic plug Ø8 mm
1		plastic plug Ø25 mm
1		emblem Hepco & Becker ø30mm
1		seal strip 20x40 100 cm
4		rubber buffer
4		washer Ø6,4

**Please check that the SPORTRACK is securely fitted before driving.**



**Hepco & Becker GmbH**  
 An der Steinmauer 6  
 D-66955 Pirmasens  
 Tel.: +49 6331 - 1453 - 100  
 Fax: +49 6331 - 1453 - 120  
 eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)  
[www.hepco-becker.de](http://www.hepco-becker.de)

**Control all screw connections after the assembling for tightness!  
 Please notice our enclosed service information.**

YAMAHA MT - 125 / ABS

Item.-No.: 670.4543 black

## Assembling instructions

### Preparing:

Dismantle the pillion seat.

### Preparing of the sportrack:


Stick the countersunk head screws M6 x 18 through the borings in the plate.

Fix the holding plate at the backside of the sportrack with washers  $\varnothing 6,4$  and self lock nuts M6.

Stick the original rubbers into the borings as shown in the drawing.

By moving the sportrack, the rubber stopper can squeeze out.

For a better fit, glue in the rubber stopper!

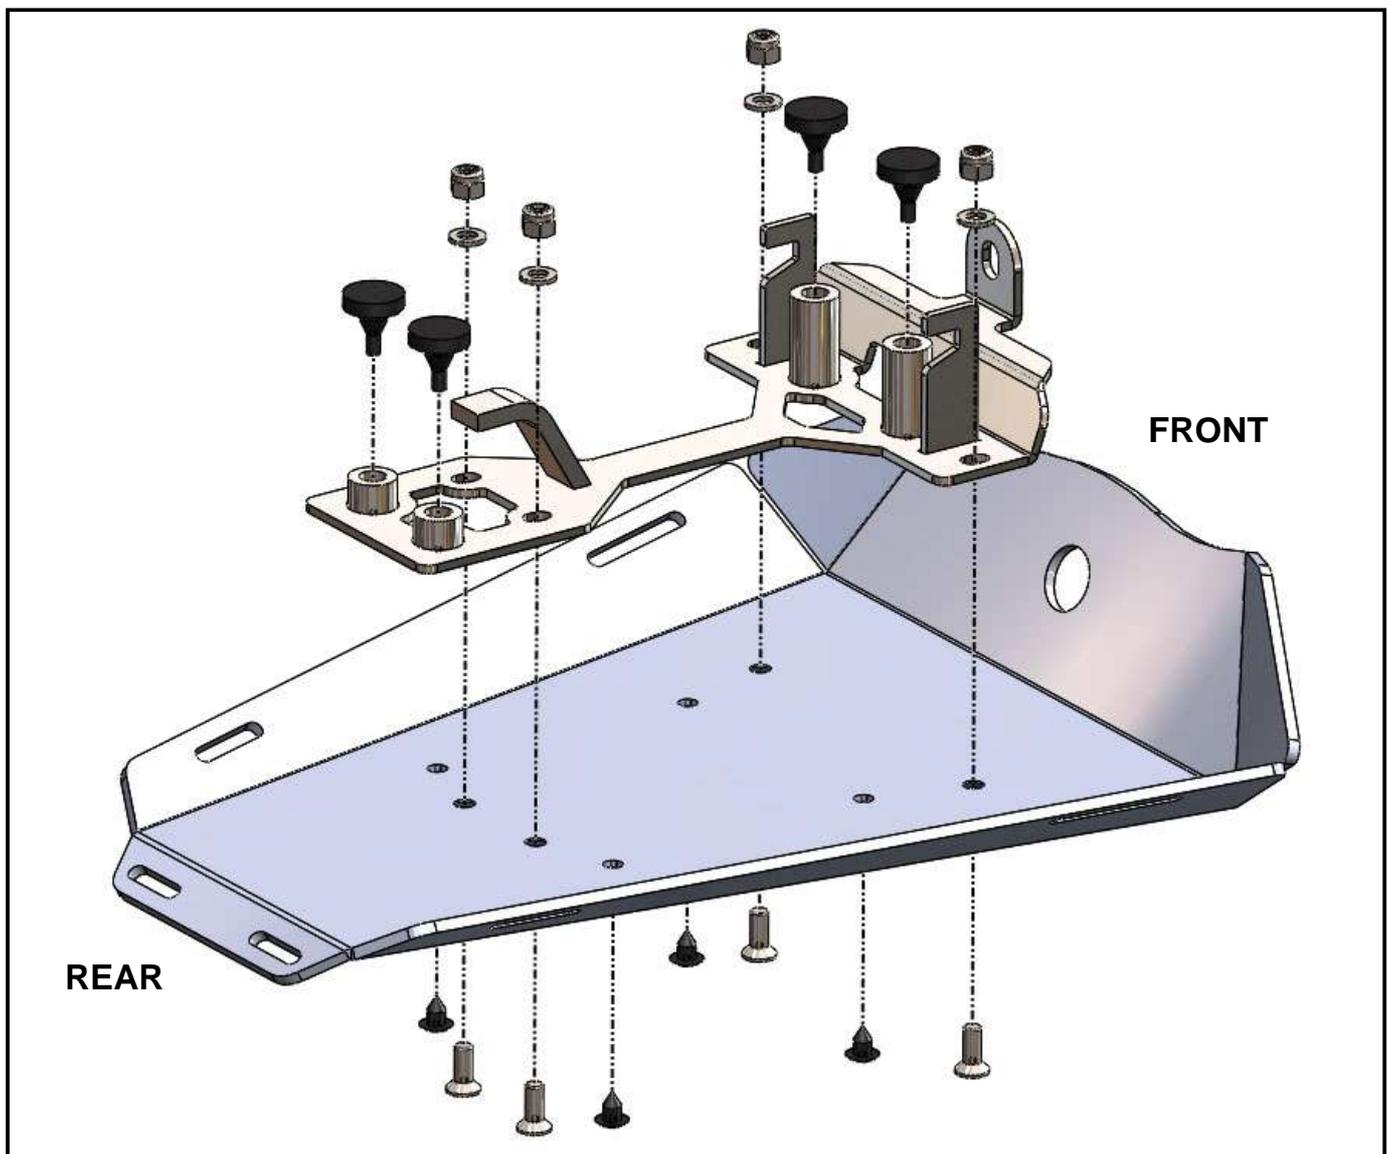


YAMAHA MT - 125 / ABS

Item.-No.: 670.4543 black

## Assembling instructions



Affixing of the seal strip:  
this will be stuck, as shown on the picture, to the back of the Sportrack plate.

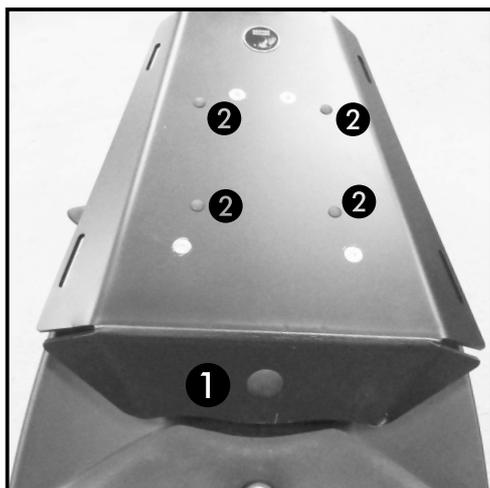

Mounting to the bike:  
Fixing the SPORTRACK onto the motorbike is the same as fixing a pillion seat.

Insert Sportrack from the front into the brackets on the rear frame and screw with the original nut.

Seal up the hole with sealing plug **1**

Seal up the 4 holes not in use with sealing plugs. **2**

In these holes, you can fix the Lock it holder for our Sportrack rear bag, see next picture.



Luggage recommendation:

Our Sport Rack rear bag, designed specifically for the SPORTRACK. The corresponding Lock it holder is screwed on Sportrack.

The fastening of the bag is easy thanks to the magnetic system of the Lock it rear bag holder.

Article number: 640 806 00 01