

HONDA CBR 300 R

Art.-Nr.: 670991 schwarz

Montage

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700009027	Gepäckplatte, schwarz
1	700009028	Trägerplatte
1	700009029	Dichtleiste, schwarz

1	700009030	Schraubensatz:
4		Senkkopfschrauben M6 x 18
4		selbstsichernde Muttern M6
4		Verschlußstopfen Ø8 mm
1		Logo Hepco & Becker ø30mm
1		Dichtband 20x40 100 cm
4		Gummipuffer
4		U-Scheiben Ø6,4



Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
 Bitte beachten Sie unsere beigefügten Serviceinformationen.



Hepco & Becker GmbH
 An der Steinmauer 6
 D-66955 Pirmasens
 Tel.: 06331 - 1453 - 100
 Fax: 06331 - 1453 - 120
 eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

HONDA CBR 300 R

Art.-Nr.: 670991 schwarz

Montage


Die 4 nicht benutzten Bohrungen der Gepäckplatte mit Verschlußstopfen verschließen.
Die Befestigung des SPORTRACKS am Motorrad erfolgt in der gleichen Weise wie beim Soziussitz.
Bitte vor dem Fahren den festen Sitz des SPORTRACKS im Schloss kontrollieren.

Montage der Dichtleiste:

Die Dichtleiste wird zwischen der vorderen Sitzbank und Rahmen montiert. ①

Die Verschraubung erfolgt mit den Originalschrauben. Dann ca.25cm Dichtband ② abschneiden und aufkleben.

Das restliche Dichtband auf die Unterseite des Sportracks kleben (siehe nächstes Bild).

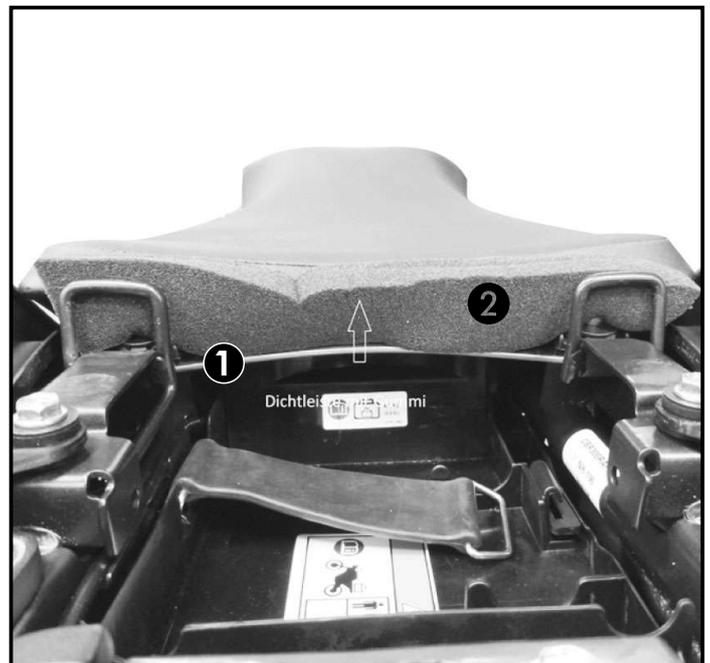

Anbringung des Dichtbandes:

Dieses wird, wie gezeigt, auf der Rückseite der Sportrackplatte aufgebracht.



HONDA CBR 300 R

Item.-No.: 670991 black



Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700009027	sportrack plate, black
1	700009028	holding plate
1	700009029	seal strip metal, black
1	700009030	screw kit:
4		countersunk head screw M6 x 18
4		self lock nuts M6
4		plastic plug Ø8 mm
1		emblem Hepco & Becker ø30mm
1		seal strip 20x40 100 cm
4		rubber buffer
4		washer Ø6,4



Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

HONDA CBR 300 R

Item.-No.: 670991 black

Assembling instructions


Preparing:

Dismantle the pillion seat

Preparing of the sportrack:

Fix the holding plate **1** at the sportrack with countersunk head screws M6 x 18, washers $\varnothing 6,4$ and self lock nuts M6.

Stick the original rubbers into the borings as shown in the drawing. **2**

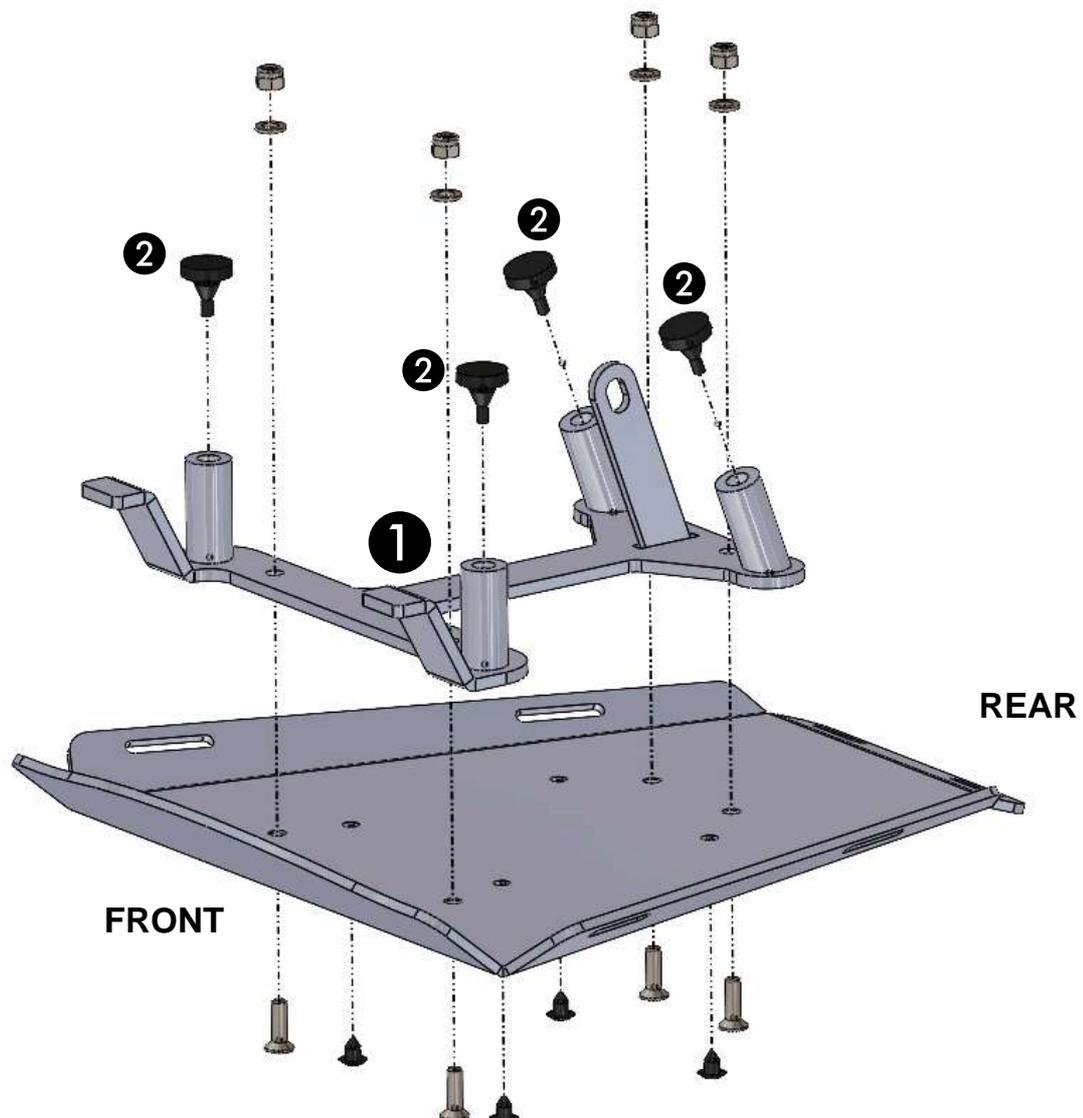

HONDA CBR 300 R


Item.-No.: 670991 black

Assembling instructions

Seal up the 4 holes not in use with sealing plugs.
Fixing the SPORTRACK onto the motorbike is the same as fixing a pillion seat.
Please check that the SPORTRACK is securely fitted before driving.

Installation of the metal seal strip:

The seal strip ① is mounted between the front seat and frame with the original screws.
Then cut and stick ca.25cm seal strip (flexible foam) at the metal strip. ②
Stick the remaining seal strip on the underside of the sport rack (see next picture).

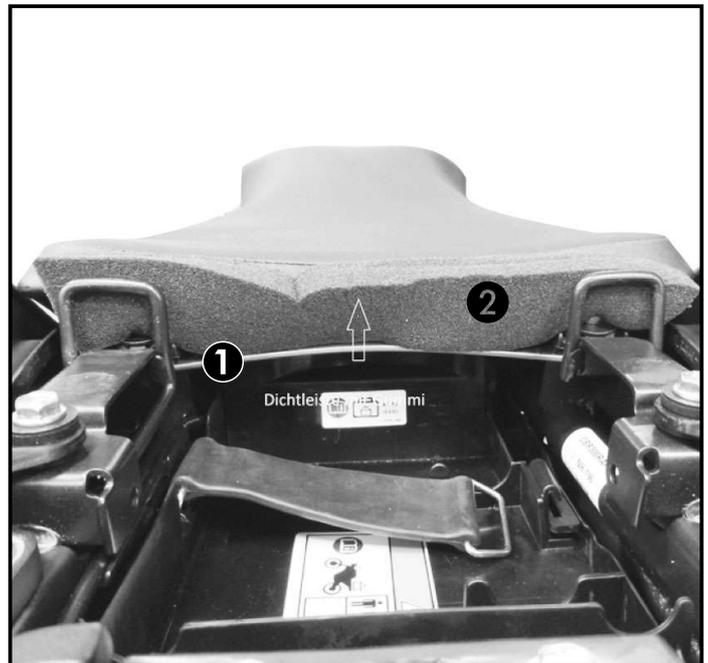

Affixing of the seal strip:

This will be stuck, as shown on the picture, to the back of the Sportrack plate.

